

Installation & Test Guide

 
For HP LaserJet Pro M402

Extending the Resources and Abilities of Your Printer


WARNING: Do not insert your BarCodes & More USB device into your PC or any system other than your printer. PCs and other systems can automatically erase the device. The device is only compatible with the USB connectors located *inside* your printer.




1 Use the power switch to turn off the printer.

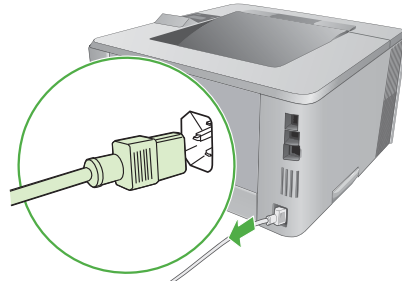

 2 Unplug the power cord from the printer.

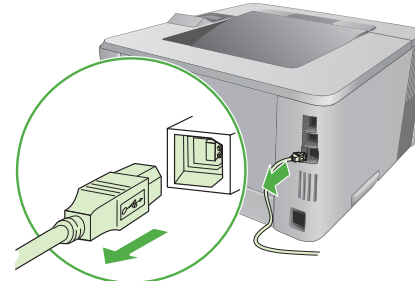


 3 Unplug all remaining cables from the printer.

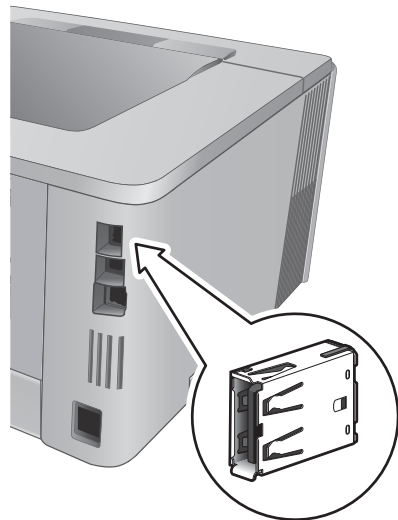

4 Locate the USB port and connectors.

 5 Insert the BarCodes & More into the USB connector. The BarCodes & More will only insert in one orientation. If it does not insert easily, rotate it and try again. Never use strong force. Strong force may damage your printer.

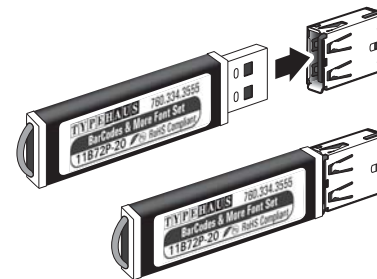

6 Reconnect all cables and cords, then turn the power switch on.

Congratulations!

You are now ready to print bar codes (and more) using your printer. To test your BarCodes & More, simply use your printer's control panel to print a PCL Font List. On most printer models, select "Information" and then "Print PCL Font List".

See the reverse side of this sheet for an example of the first page of a PCL Font List showing the BarCodes & More fonts. The PCL Font List may vary a little between different printer models, but the bar code fonts will be shown somewhere in the list.

TypeHaus Reorder Part Number: 11B72P-20

Solutions
Business Partner



TypeHaus, Inc.
655 Second Street
Encinitas, CA 92024
760.334.3555
www.typehaus.com

