

BarCodes & More

Installation & Test Guide


For HP LaserJet Pro M402

typehaus
INCORPORATED


WARNING: Do not insert your BarCodes & More USB device into your PC or any system other than your printer. PCs and other systems can automatically erase the device.




- 1** Use the power switch to turn off the printer.

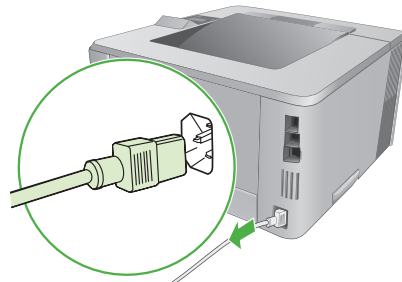

- 2** Unplug the power cord from the printer.

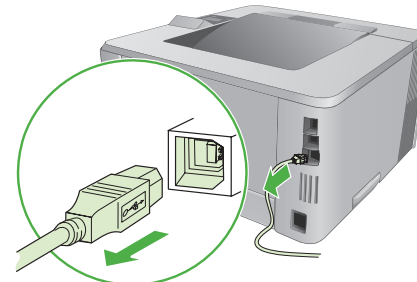


- 3** Unplug all remaining cables from the printer.

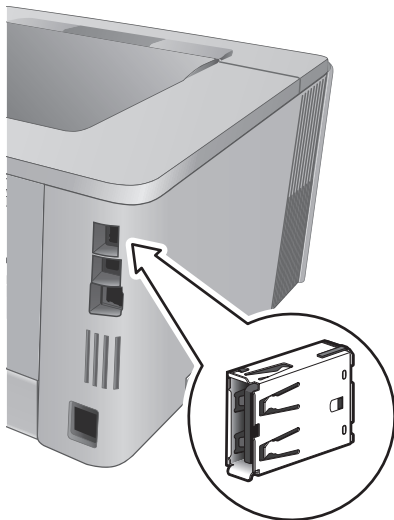

- 4** Locate the USB port and connectors.

- 5** Insert the BarCodes & More into the USB connector. The BarCodes & More will only insert in one orientation. If it does not insert easily, rotate it and try again. Never use strong force. Strong force may damage your printer.

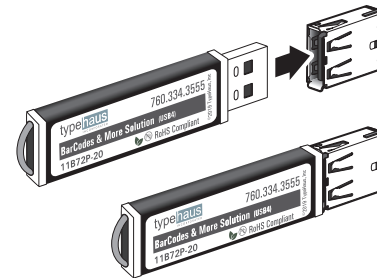

- 6** Reconnect all cables and cords, then turn the power switch on.

Congratulations!

You are now ready to print bar codes (and more) using your printer. To test your BarCodes & More, simply use your printer's control panel to print a PCL Font List. On most printer models, select "Information" and then "Print PCL Font List".

See the reverse side of this sheet for an example of the first page of a PCL Font List showing the BarCodes & More fonts. The PCL Font List may vary a little between different printer models, but the bar code fonts will be shown somewhere in the list.

HP JetAdvantage
Silver Solution Partner 

TypeHaus Reorder Part Number: 11B72P-20

TypeHaus, Inc.
2262 Rutherford Rd., Ste. 103
Carlsbad, CA 92008
760.334.3555
www.typehaus.com

© 2019 TypeHaus, Inc. All rights reserved. (50079-190702A)

